



72-251 Removal and installation of rear door lock

Removal

- 1 Remove door liner (72-101).
- 2 Detach linkage at door lock and remove inside door controls.
- 3 Remove window lift (72-187) of models with side impact reinforcements or electric window controls.

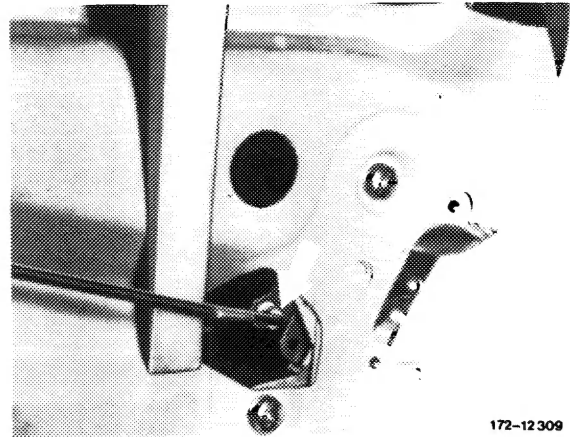


- 4 Remove door lock screws.

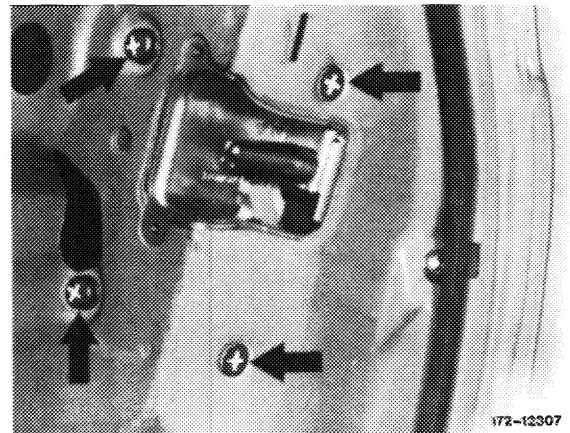

- 5 Take door lock off of door downward.

Installation

- 6 First tighten both visible mounting screws on face and then the screw on inside door panel to 8 Nm (0.8 kpm).

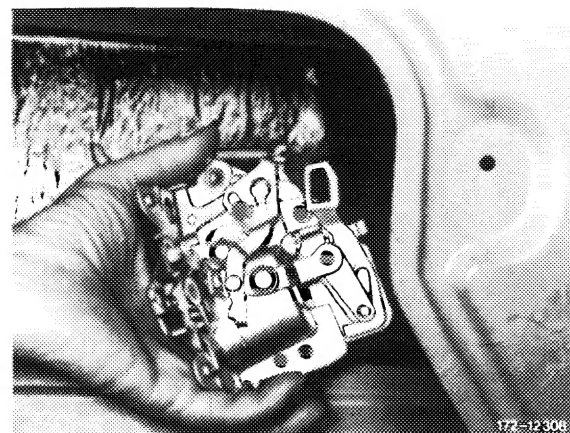


Attention!

On models 123.003/007/028/103/105/125/132
(with longer wheel base) make a recess in lock
cover so that the grip of the outer door handle can
snap back into its rest position to guarantee reliable
closing of door.

Refinished lock cover

a = 20 mm

b = 40 mm

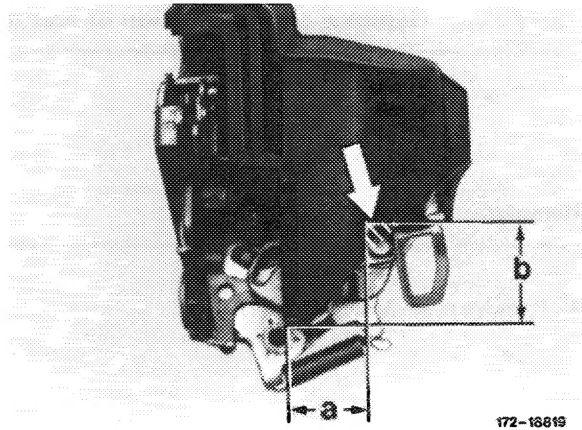

7 For further installation proceed vice versa.